

Sterin™

irradiation indicators

Sterin irradiation indicators were developed for the Sterile Insect Technique (SIT) program to provide positive, visual verification of irradiation at or above the printed minimum indicated dose (70 Gy, 100 Gy, 125 Gy or 145 Gy). When attached to products, Sterin indicators show whether or not the products have been irradiated. Before a product and its attached indicator are irradiated, the indicator reads "NOT IRRADIATED." After the product is irradiated, the word "NOT" in the indicator window is obscured and the indicator reads "IRRADIATED." Sterin indicators only indicate that irradiation has occurred. They should not be used to measure the dose delivered by the irradiator.


Features of Sterin indicators

- Simple to use
- Easy to interpret
- Attaches easily to container
- Contains radiation-sensitive film

Benefits of Sterin indicators

- Reduces operator errors
- Provides positive, visual verification of irradiation
- Enhances quality assurance
- Meets cGMP requirements

Examples of Sterin 125 Gy indicators Before and After Irradiation are shown below:

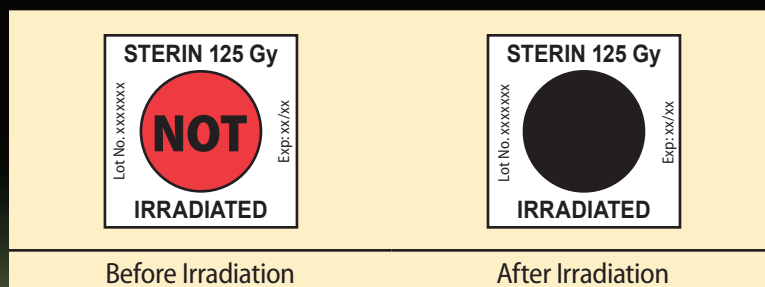

In addition to Sterin 125 Gy, Sterin 70 Gy, 100 Gy and 145 Gy indicators are available.



ASHLAND®

With good chemistry great things happen.™

Global Headquarters

Ashland Inc.
50 East RiverCenter Blvd.
Covington, KY 41012 USA
Tel: +1 859 815 3333

Ashland Specialty Ingredients
8145 Blazer Drive
Wilmington, DE 19808 USA
Tel: +1 800 345 0447
Fax: +1 302 992 7287

Regional Sales Offices

North America
Bridgewater, NJ USA
Tel: +1 908 243 4766
Fax: +1 908 243 4773

ashland.com/sterin

* Registered trademark, Ashland or its subsidiaries, registered in various countries
™ Trademark, Ashland or its subsidiaries, registered in various countries
© 2014, 2015, Ashland
PC-12743.1

All statements, information and data presented herein are believed to be accurate and reliable, but are not to be taken as a guarantee, an express warranty, or an implied warranty of merchantability or fitness for a particular purpose, or representation, express or implied, for which Ashland Inc. and its subsidiaries assume legal responsibility.

Sterin™ irradiation indicators ordering information

Version	Product Code	Packaging
Sterin 70 Gy	831871	500/Box
Sterin 100 Gy	831859	500/Box
Sterin 125 Gy	831868	500/Box
Sterin 145 Gy	831869	500/Box